


Voice Classic Remote Guide

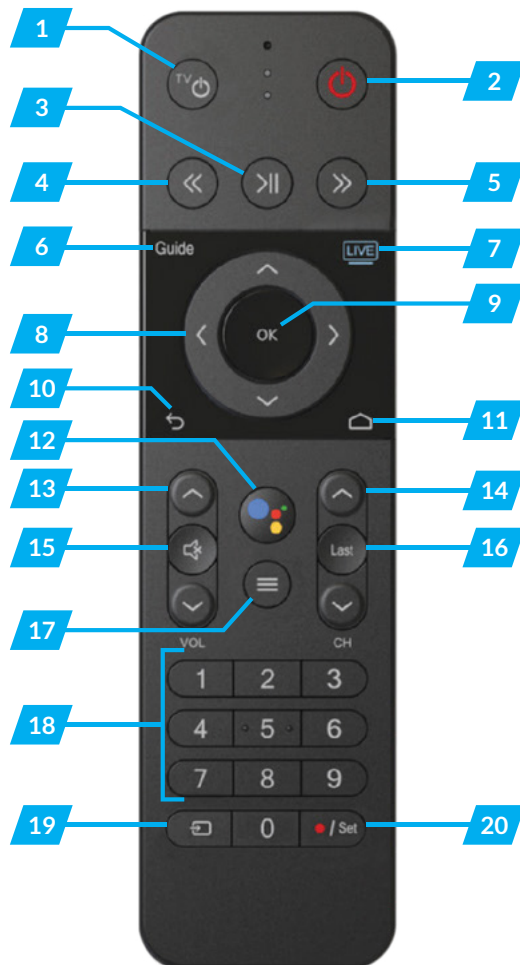

Note Any button press will power on the Kaon set-top box.

1	TV Power	Powers or turns off TV.
2	Power	Switches set-top box power on or into Stand-By Mode.
3	Pause / Play	Plays or pauses VOD or Live TV.
4	Rewind	Fast rewinds VOD or Live TV.
5	Fast Forward	Fast forwards VOD or Live TV.
6	Guide	Launches the channel guide (EPG) within the TV app.
7	Live TV	Tunes to the last content viewed.
8	Arrows	Moves to highlight items in the respective direction.
9	OK/Select	Confirms a selection when watching video in the TV app.
10	Back/Exit	Returns to the previous menu or state within the current app.
11	Google/Home	Launches Google Home and switches away from the current app.
12	Voice/Search	Press and release to enter a voice command. Sends a search key code before transmitting voice to the STB.
13	Volume (Up or Down)	Increases or decreases volume levels on your audio device.
14	Channel (Up or Down)	Selects the previous and next available channels. (Hold for rapid advance.) Also acts as Page Up/Page Down in menus.
15	Mute	Mutes the audio on your audio device (TV, sound bar, or AVR).
16	Last	Short press: Displays recently watched or last channel viewed. Long press: Switches between the current and last channel viewed.
17	Menu	Launches the main menu within the TV app, with live video.
18	0-9	Enters channel numbers in the guide or full-screen video.
19	TV Input	Changes the video input on your TV.
20	Record / RCU setup	Begins recording selected content in the TV app. Also used to set up the remote for your TV and program audio device.